



IMPORTANT SUNCO Trash Discs Height Setting Instructions

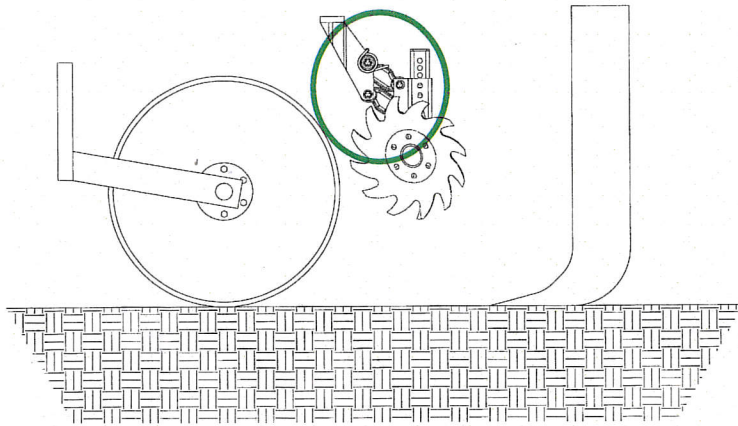

Step 1


Install mount to machine and blades to stem. (Note the right and left blade must be installed on the proper side.)

Important: Check 4 linkage bolts and 3 assembly mount bolts periodically during initial use for tightness.

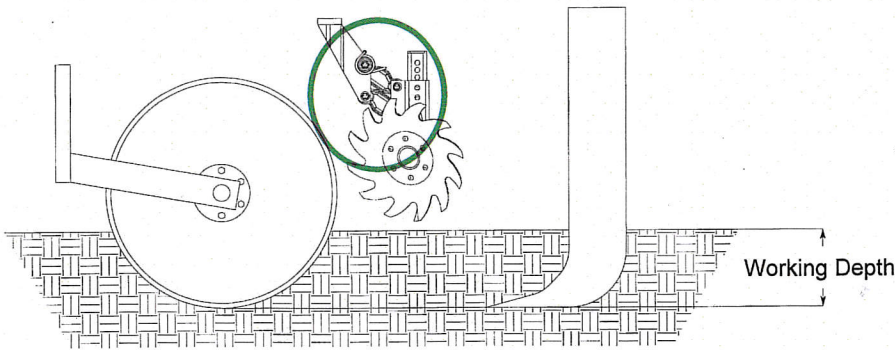

Step 2


Go to field and set the strip till at the desired working depth. (See illustration.)

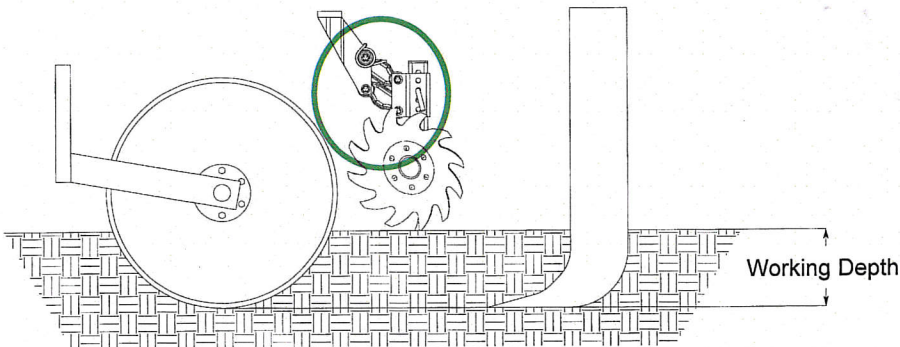

Step 3

Lower stem in receiver tube until discs touch the top of the ground. Run a short distance and observe path cleaned. (Note: Linkages are angled down - this is the correct running angle! See illustration.)

INCORRECT!

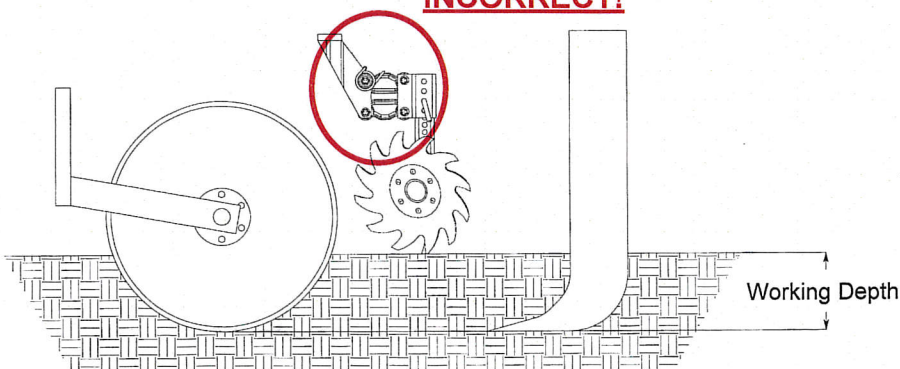

Incorrect Height Setting

Do Not lower discs to make parallel linkages run level. (see illustration.) Excessive material moved, and wear will result, plus possible damage to assembly.